




## Instructions for preparing the carbon heating film for installation.

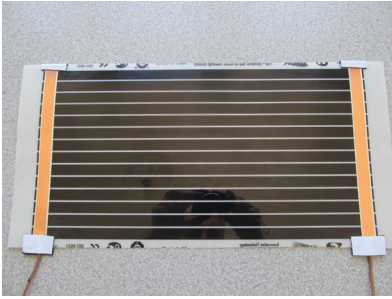


1. For easier understanding only one section of the carbon film is shown. That's how it should look when read (ph1). On one side the cold ends which are used for the wiring are mounted, on the other side it is covered with safety tape on top of the copper stripe.

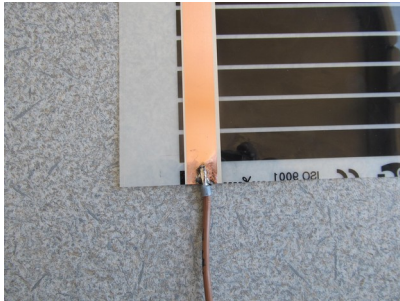


2. This is mounting of the cold ends by soldering (the better way) – ph2.

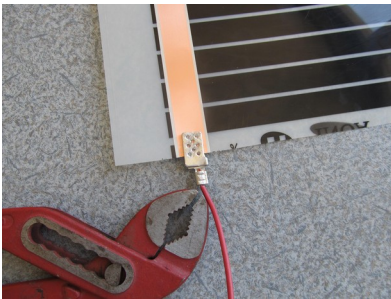

3. This is mounting of the cold ends using clips and pliers – ph3.

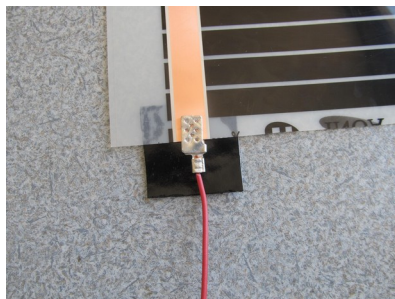

4. No matter which way you use the mounting spot is insulated carefully with safety tape from both sides – ph4 and ph5

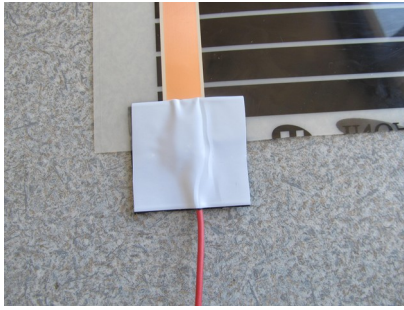

5. On the back side the copper stripe is insulated for safety with the special tape – ph6 and ph7.

